



Armrest Up & Down Adjustment
Press button on stem to adjust armrest height.



Seat Height Adjustment
Twist back right paddle under seat to adjust seat height.



Lumbar Adjustment
Twist knob on back to adjust lumbar support.



Backrest Tilt Angle Adjustment
Twist paddle on left under seat to adjust backrest tilt.



Seat Slider Adjustment
Lift up on front right paddle under seat to adjust seat slider.